

پرشر سوئیچ دانفوس

MODEL : KP5



alisanat.com



copyright © photo by alisanat.com

alisanat.com



copyright © photo by alisanat.com

alisanat.com



copyright © photo by alisanat.com

alisanat.com



copyright © photo by alisanat.com

alisanat.com



copyright © photo by alisanat.com

alisanat.com



copyright © photo by alisanat.com

Installation guide
Pressure switch

KP 1, KP 2, KP 5, KP 7W, KP 7B

060R9746

Refrigerants:

R22, R134a, R404A, R407A, R407C, R407F, R422B, R422D, R448A, R449A, R450A, R452A, R507A, R513A

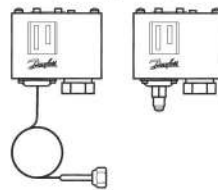
 For complete list of approved refrigerants, go to <http://products.danfoss.com/all-products/>

CAUTION:

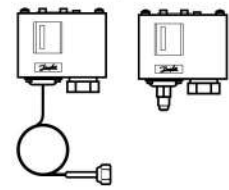
Do not install these controls on ammonia systems.

Auto reset:

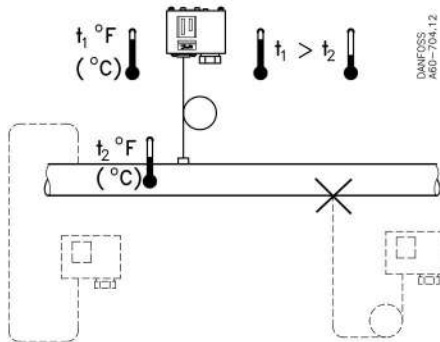
KP 1, KP 2, KP 5, KP 7W


Manual reset:

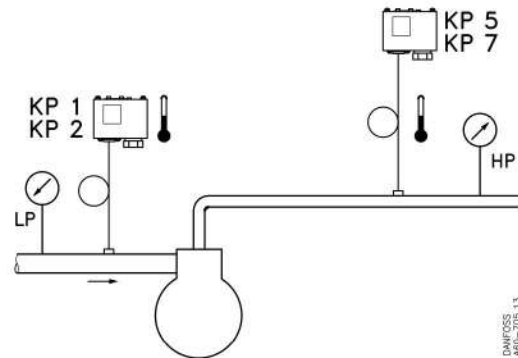
KP 1, KP 5, KP 7B



060R9746

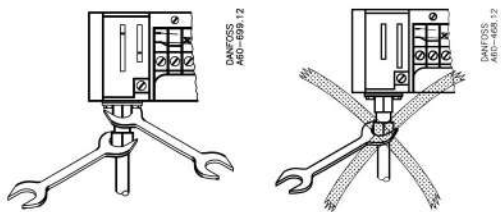
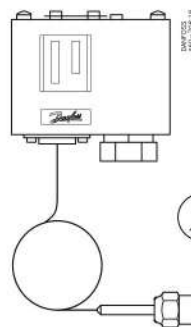
Mounting requirements

CAUTION:

Do not mount the control in a position where dirt, sediment or oil will affect the operation of the control.

Ambient temperatures

t₁ min. KP 1, KP 2, KP 5: -40 °F (-40 °C)

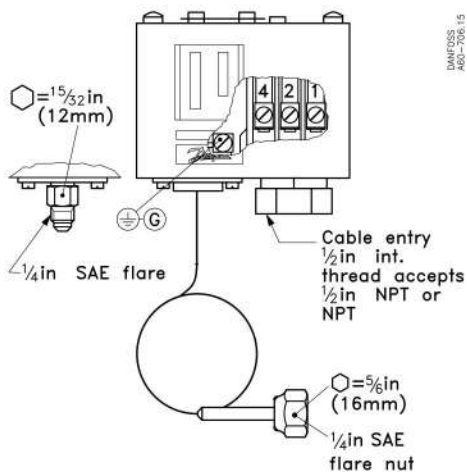
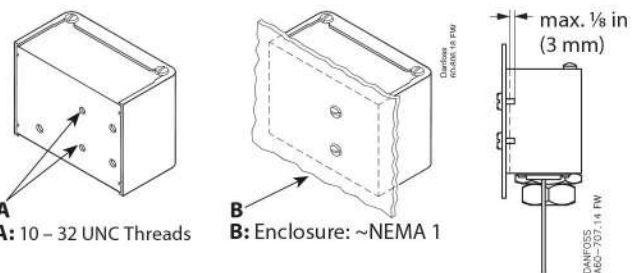
t₁ min. KP 7: -13 °F (-25 °C)

t₁ max.: 149 °F (65 °C)

Mounting

Test pressure (P_{test})

P_{test} max.:
KP 1, KP 2: 285 psig (20 bar p_a)

KP 5, KP 7: 510 psig (35 bar p_a)

KP 2: 174 psig (12 bar p_a)

Connections

Enclosure

CAUTION:

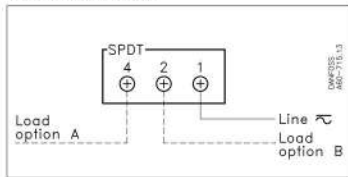
The mounting panel must be plane to avoid damage of control.


CAUTION:

Disconnect power supply before wiring connections are made or service to avoid possible electrical shock or damage to equipment. Do never touch live parts with your fingers or with any tool.

Wiring

All wiring should conform to the National Electrical Code and local regulations.

Terminal block

CAUTION:

Use terminal screws furnished in the contact block. Use tightening torque 20 lb. in (2.3 Nm). Use copper wire only.

Contact load ratings

120 V AC	16 FLA, 96 LRA
240 V AC	8 FLA, 48 LRA
240 V DC	12 W pilot duty

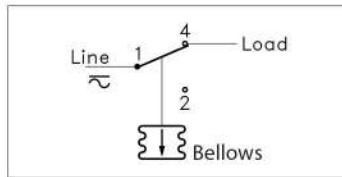
Load Option A

CUT-OUT on pressure drop

Wire terminals 1-4:

CUT-IN = High Set Point (HSP)
see "Setting"

CUT-OUT = Low Set Point (LSP)
see "Setting"



Terms 1-4 close on pressure rise
Terms 1-4 open on pressure drop

Example:

CUT-IN = 30 psig
CUT-OUT = 10 psig

This means:

CUT-IN = HSP = 30 psig
CUT-OUT = LSP = 10 psig

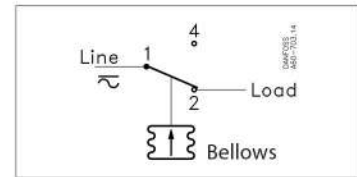
Load Option B

CUT-OUT on pressure rise

Wire terminals 1-2:

CUT-IN = Low Set Point (LSP)
see "Setting"

CUT-OUT = High Set Point (HSP)
see "Setting"



Terms 1-2 close on pressure drop
Terms 1-2 open on pressure rise

Example:

CUT-IN = 250 psig
CUT-OUT = 350 psig

This means:

CUT-IN = LSP = 250 psig
CUT-OUT = HSP = 350 psig

Note:


Bellows movement on pressure rise

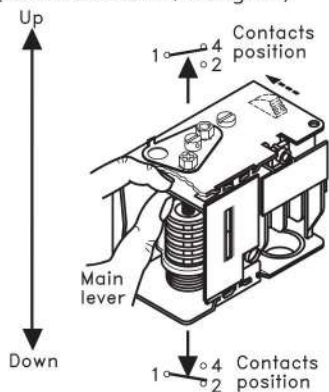


Bellows movement on pressure drop

The free terminal can be used for signal purpose.

Manual trip function

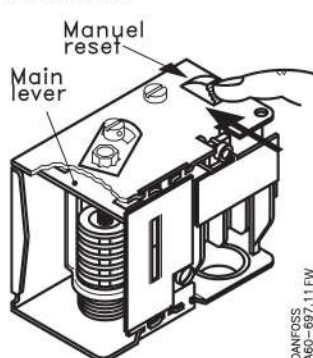
(Electrical contacts / wiring test)



TRIP (main lever)
use **FINGERS ONLY!**
(Do NOT use screwdriver)

Note:
KP 1, KP 5 and KP 7B with man. reset:

Push manual reset knob during manual tripping.

Manual reset


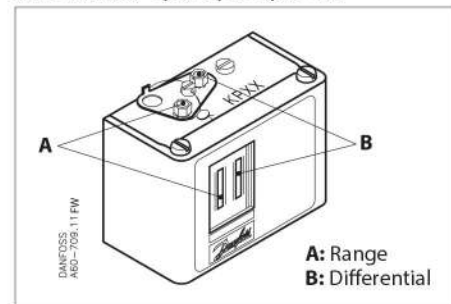
To resume control operation after safety cutout, push reset knob as indicated.

Note:

KP 1, man. reset is possible only after a pressure rise of 10 psi (0.7 bar). **KP 5** and **KP 7B**, man. reset is possible only after a pressure drop of respectively 43 psi (3.0 bar) and 58 psi (4.0 bar).

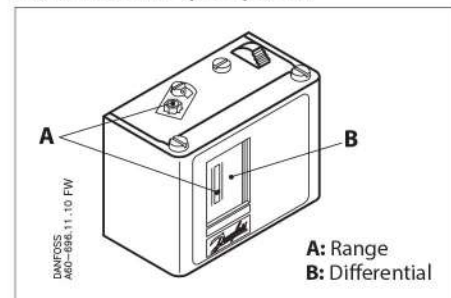
Adjustment spindle(s) location

Auto reset KP 1, KP 2, KP 5, KP 7W



A: Range
B: Differential

Manual reset KP 1, KP 5, KP 7B

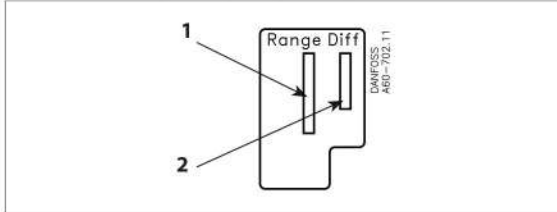


A: Range
B: Differential

Type	Differential
KP 1	10 psi (0.7 bar)
KP 5	43 psi (3 bar)
KP 7B	58 psi (4 bar)

Setting

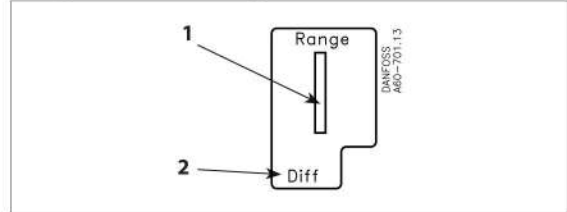
(see also "Wiring")

KP 1 (auto reset), KP 2, KP 5, KP 7W, KP 7B


1. Adjust range spindle to desired HIGH SET POINT (HSP)
2. Adjust differential spindle to desired DIFFERENTIAL (DIFF).

Note:

KP 5 (manual reset) and KP 7B have fixed diff. Value printed on scale plate.

KP 1 (manual reset ONLY)


1. Adjust range spindle to desired LOW SET POINT (LSP)
2. DIFFERENTIAL is fixed Value printed on scale plate

HIGH SET POINT minus DIFFERENTIAL equals LOW SET POINT
Example:

$$\begin{array}{rcl} \text{HSP} & - & \text{DIFF.} = \text{LSP} \\ 30 \text{ psig} & - & 20 \text{ psi} = 10 \text{ psig} \\ (2.1 \text{ bar}) & & (1.4 \text{ bar}) \quad (0.7 \text{ bar}) \end{array}$$
LOW SET POINT plus DIFFERENTIAL equals HIGH SET POINT
Example:

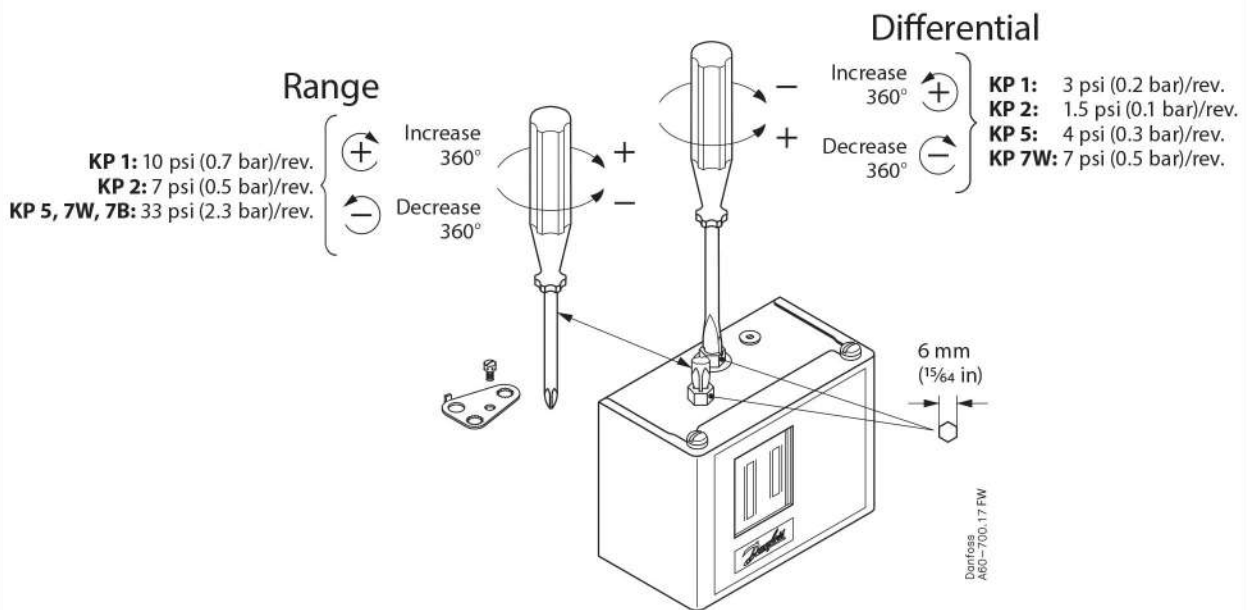
$$\begin{array}{rcl} \text{LSP} & + & \text{DIFF.} = \text{HSP} \\ 12 \text{ psig} & + & 10 \text{ psi} = 22 \text{ psig} \\ (0.8 \text{ bar}) & & (0.7 \text{ bar}) \quad (1.5 \text{ bar}) \end{array}$$

 If terminals 1-4 are used: CUT-IN = HSP
 CUT-OUT = LSP

 If terminals 1-2 are used: CUT-IN = LSP
 CUT-OUT = HSP

Adjustment

See instruction printed on top of control


Note:

 Remove lockplate before adjustment.
 Replace lockplate after adjustment (if desired).



علی صنعت

طراحی و تنظیم این کاتالوگ صد درصد توسط شرکت علی صنعت انجام شده
و تمامی حقوق برای شرکت علی صنعت محفوظ میباشد

The design and layout of this catalog have been 100% done by
Ali Sanat Company and all rights are reserved for
Ali Sanat Company

021-33112229

09123118117

www.alisanat.com